

Unloading instructions for heat exchangers°

Accident warning to avoid personal injury or equipment damage

- 1) For moving, installing and maintenance following directions must be strictly kept:
- 2) Machines like cranes, forklifts etc. must be operated by authorised personnel only. To prevent any kind of damage the transport and unloading instructions must be strictly followed.
- 3) CABERO heat exchangers are strictly pressure tested and charged with nitrogen.
- 4) Therefore each unit must be checked for pressure and visible damages before unloading.
- 5) Before connecting the heat exchangers please care for following directions:
- 6) Discharge nitrogen by the valve before opening the solder connections.
- 7) Connecting of the unit only by authorised personnel.
- 8) For soldering connections must be guaranteed the heat exchanger can not be hit by the flame. Otherwise adequate precautions must be taken (e. g. shields)
- 9) Before connecting the wires please care for the following directions:
- 10) The electrical connecting of the unit only by authorised personnel.
- 11) Main switch of power supply or eventually mounted switches on the unit must be shut off and locked in this position.
- 12) To avoid short circuits all wire connections must be tightened before initial start up.
- 13) Use of safety gloves and safety shoes recommended
- 14) It is strictly forbidden to stand below hanging goods.

Important instructions to load and unload the goods.

Due to the size of the coolers they are not packed in a crate. Therefore it is very important to unload them with the utmost care. Using a forklift you have to make sure the length of the forks exceeds the width of the unit. It is impossible to lift the finned coil with the forks. A total damage of the coil would be the natural consequence. To unload units of more than 5 m length we recommend the use of two forklifts. Please pay utmost attention to the methods as prescribed!



Unloading instructions for heat exchangers°

